


5m Sterile area between topsoil and ROW fence to allow water to be pumped to land if required. Filtered using silt sock and hay bales. Mitigation measure of pre-construction drain being situated within this area to prevent run off into adjacent land. Further mitigation measure of lagoon to be constructed within working area to manage discharge rate if required.

TYPICAL RIGHT OF WAY (ROW) PLAN
(SCALE 1:100)

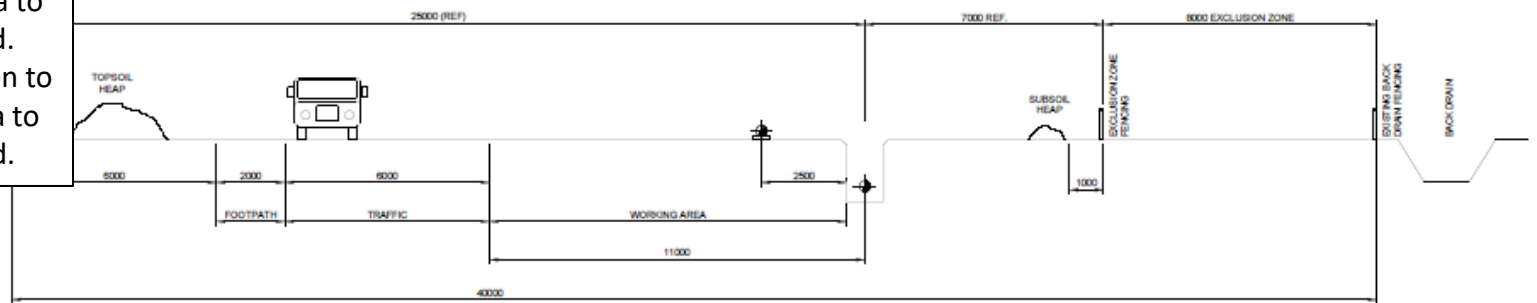

TYPICAL RIGHT OF WAY (ROW) CROSS-SECTION (A-A)
(SCALE 1:100)

Key

- Post Construction Drainage (900 deep, 100mm dia)
- Pre Construction Drainage (1200 deep, 150mm dia)